

HEAT TRANSFER

CfE Heat Topic

Sep-11

jah slide no. 1

1

Homework for the Block

- HEAT TITLE PAGE
- Logic Problem Sheet
- Research on your topic
- Write up Your Experiment and Present to the rest of the class
- Read about u-values from e-boards (merit)
- Complete the evaluation sheet



Sep-11

jah slide no. 2

2

Heat can be transferred in 3 ways


- CONDUCTION
- CONVECTION
- RADIATION

- Usually heat is transferred in all 3 ways at once.
- Heat travels from HOT places to COLD places

Sep-11

jah slide no. 3

3

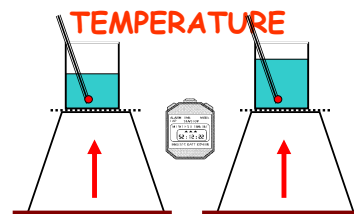

- Temperature is how HOT or COLD something is.
- Temperature is measured in degrees Celsius ($^{\circ}\text{C}$)
- HEAT is a form of ENERGY. Energy is measured in JOULES

Sep-11

jah slide no. 4

4

Heat Transfer

- Heat ALWAYS travels from HOT places to COLD places


Sep-11

jah slide no. 5

5

INSULATION

- The opposite of conduction is INSULATION.
- We can put INSULATORS in the house to prevent HEAT TRANSFER

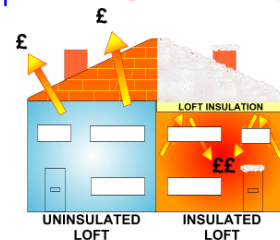

Sep-11

jah slide no. 6

6

CONDUCTION

- Heat passing through a **SOLID**
- Heat is transferred by making the particles vibrate more passing the energy along the conducting material.
- <http://www.echalk.co.uk/Science/physics/conduction/conduction.html>



1. **CONDUCTION** – book passed from student to student.
2. **CONVECTION** – book taken a student to the back of the room.
3. **RADIATION** – book thrown to the back of the room.
4. **EVAPORATION** - ???

Sep-11

jah slide no. 7

7

Sep-11

jah slide no. 8

8

CONDUCTION

- Conduction occurs in solids.
- Metals are good conductors.
- Non-metals, liquids and gases are poor conductors.
- Bad conductors are good insulators.

Sep-11

jah slide no. 9

9

How to summarize these slides

Do not copy this slide.

Copy the table on the next slide and record all the examples given in this PowerPoint to show what you can do to a house to reduce heat loss, how the method works and which type of heat transfer it reduces.

Sep-11

jah slide no. 10

10

Reducing heat loss from houses

<u>What</u>	<u>How</u>	<u>Heat Transfer</u>
Paint radiators black	Black surfaces emit more heat than shiny surfaces	Radiation


Sep-11

jah slide no. 11

11

INSULATION (Conduction)

- In loft: fibre glass, sheepskin, paper pulp.
- In walls: fibre glass, paper pulp, polystyrene and many new materials (e.g. celotex).



Sep-11

jah slide no. 12

12

INSULATION (Conduction)

- Window frames: make them from plastic not metal.
- Under carpet: underlay (made by Gates Rubber in Dumfries).




Sep-11

jah slide no. 13

13

INSULATION (Conduction)

- Floors: Use thick carpet.
- Windows: Close thick, lined curtains as soon as it is dark; double or triple glazed glass; Use glass with a good u-value.

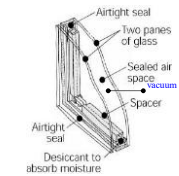

Sep-11

jah slide no. 14

14

INSULATION (Conduction)

- Roof: Slates are better insulators than metal.
- Thatched rooves are better than slate.
- Turf rooves can be used as a great insulator.
- House walls can also be made of straw.





Sep-11

jah slide no. 15

15

INSULATION (Conduction)

- Low u-values are good, less heat is lost through the walls.

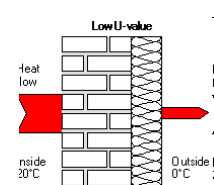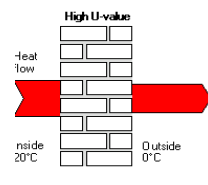

Sep-11

jah slide no. 16

16

CONVECTION

- Only occurs in liquids and gases (fluids).
- Here the molecules carry the energy with them. The molecules spread out and become less dense.
- This is why warm fluids rise and cool fluids sink.



Sep-11

jah slide no. 17

17

CONVECTION (not required)

- Hot air balloons are an example of convection currents.
- Thermals (the warm currents that birds and glider pilots use) are also an example of convection currents.

Sep-11

jah slide no. 18

18

INSULATION (Convection)

- Loft: Insulating this is really important because hot air rises so lots of heat can be lost out of the roof if it is not well insulated.
- Convection can only happen in **fluids**. If you put in a solid convection cannot occur.


Sep-11

jah slide no. 19

19

INSULATION (Convection)

- Walls: Insulating the cavity helps to stop convection.
- Convection currents are often responsible for draughts.
- Fit draught excluders around doors (sausage dogs etc.)

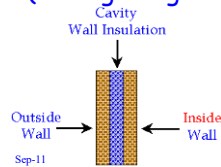

jah slide no. 20

20

INSULATION (Convection)

- Fit draught strips around windows and doors.



Sep-11

jah slide no. 21

21

INSULATION (Convection)

- Fit "postman catchers" – draught excluders on letter boxes.



Sep-11

jah slide no. 22

22

INSULATION (Convection)

- Chimneys: Since hot air rises by convection lots of heat can be lost up the chimney when not in use.
- This can be prevented covering the fire opening or using blow-up chimney pillows stuck up the chimney.



Sep-11

jah slide no. 23

23

INSULATION (Convection)

- If you don't use an open fire, seal it up (but left a little gap so it doesn't get damp).
- **WARNING:** Don't block up all the draughts, you might suffocate!



Sep-11

jah slide no. 24

24

RADIATION



- This is also called infra-red radiation and travels just like light but has a lower frequency.
- Heat travels from the Sun to Earth as radiation and these waves can travel through a vacuum.
- Anything that is hotter than its surroundings will radiate heat.

Sep-11

jah slide no. 25

25

RADIATION

- Radiation is affected by colour and surface finish. Black surfaces absorb (take in) more radiation but also emit (give out) more.
- Shiny surfaces reflect more radiation than matt (dull) ones.




jah slide no. 26

26

RADIATION

- Infra-red cameras show where heat is lost.

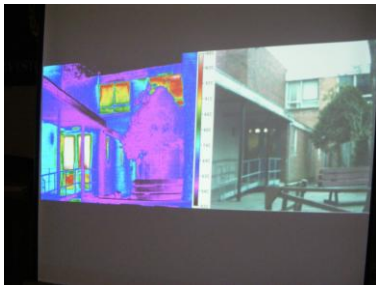

Sep-11

jah slide no. 27


27

INSULATION (Radiation)

- Use foil behind radiators. The foil will reflect radiation back into the room.
- Use foil-backed plasterboard. This reflects the radiation back into the room although there will be a little more conduction.
- Painting radiators black will make them emit more radiation.



Sep-11



jah slide no. 28

28